

11 cm felt witch ornament pattern

Print at Actual Size or 100% on US Letter or A4. Do not use Fit, Shrink or booklet mode.

Measure the 20 mm square before cutting felt. All sheets must use the same print setting.

Pattern height is 110 mm excluding the ribbon. Sewn size is about 11 cm high x 7.5 cm wide.

Digitally checked pattern. This version has not been test-sewn.

ASSEMBLY GUIDE full size

A FOUNDATION cut 2 black




Trace the guide onto tracing paper for accurate layer placement.

The foundation supplies the hat crown and supports the head. Do not cut a separate crown.

Dashed rectangle on A: ribbon attachment on the back of the FRONT foundation.

Dashed centre line on A is a placement guide only. Do not cut dashed lines.



CALIBRATION SQUARE 20 x 20 mm

Measure both directions with a ruler. Reprint if either is wrong.

Stitch 1.5-2 mm inside large edges; use tiny securing stitches on small details. No turned seams.


Layer order: A, J, B, C, D, F, E, G, H, I. Add face details before mounting C.

Cutting pieces


Solid outer lines are cut lines. The small inner outline in G is also cut out.

Grey marks in C position two 6 mm eyes and the embroidered smile. Do not cut these marks.


B HAIR cut 1 orange

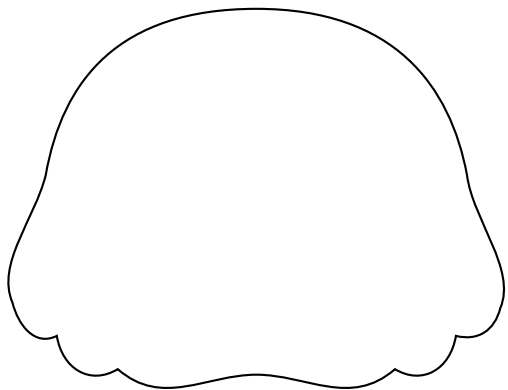


C FACE cut 1 cream

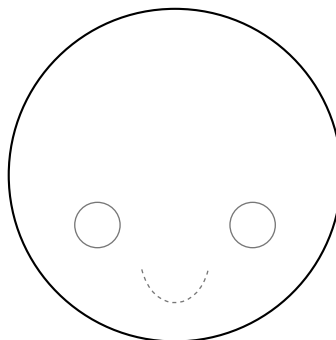

D FRINGE cut 1 orange

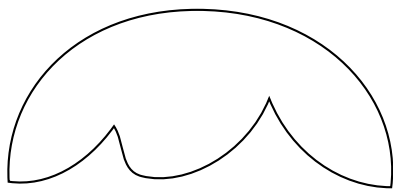

E BRIM cut 1 black

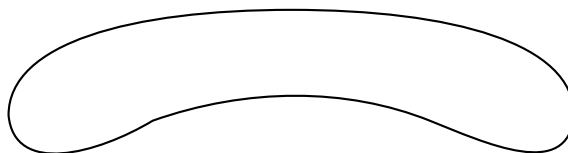


F BAND

cut 1 purple




G BUCKLE

cut 1 yellow



H BOW

cut 1 purple




I CENTRE

cut 1 purple



J TAILS cut 1 of each black

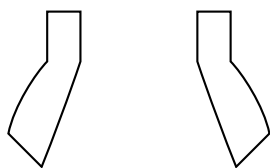

K CHEEKS

cut 2 pink



L EYES optional

cut 2 black, or embroider



Additional piece: one 120 mm length of 6 mm wide ribbon, folded in half.

Keep 15 mm of both ribbon ends on the foundation for secure stitching.

Use thin felt, about 1 mm. Keep the bow and brim flat; only the face is lightly padded.